


# WPK

## Connectors Weatherproofing Kit

Copyright © Fi.Mo.Tec. S.p.A.  
www.fimoworld.com

IST. 030 - REV. 1 - 07/16

### INSTALLATION INSTRUCTIONS

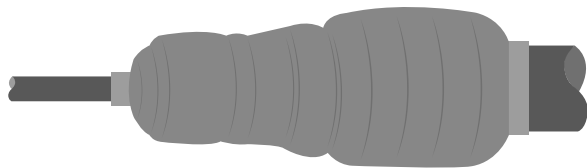

### ⚠️ WARNINGS!

Installation of products must be performed by qualified, trained and experienced personnel. Installation personnel must be correctly and safely equipped. Mounting instructions and warnings must be read prior to installation. Warnings alert you to possible dangers about improper use of product. Failure to observe warnings may result in injury or death to you or others.




Fi.Mo.Tec. S.p.A.  
is certificated ISO 9001  
and RoHS DIRECTIVES  
compliant.



All rights reserved.  
Passing on and copying of  
this document, use and com-  
munication of its contents  
not permitted without Fi.Mo.  
Tec. S.p.A. prior consent.




1

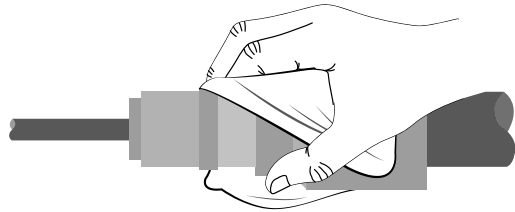


Prepare the cable by drying the cable and the connectors.

2

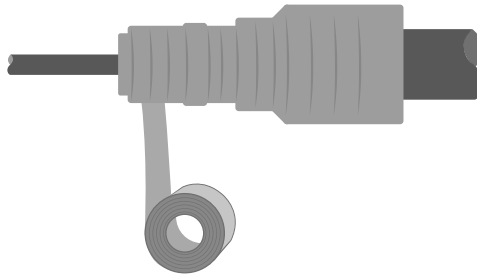


Wrap the connection with a layer of 19 mm plastic adhesive tape.

3

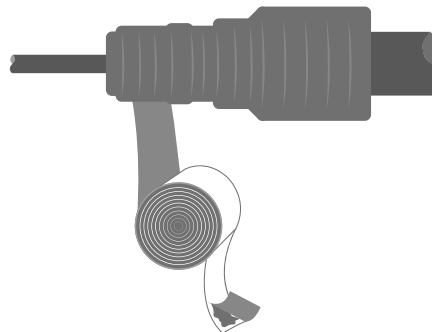


Expand the width of the 50 mm butyl tape by stretching it so that it will wrap completely around the connector and cable. Wrap the butyl tape around the cable and the connector cable. Press the butyl tape edges together so that there are no gaps. Press the butyl tape against the connection and cable.

4

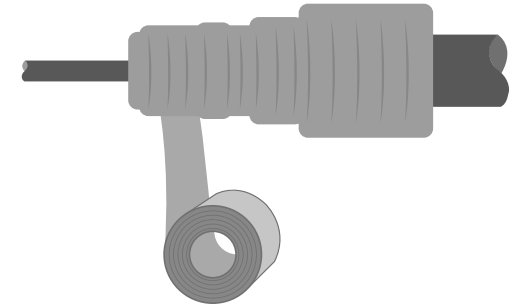


Wrap two layers of 50 mm adhesive plastic tape overlapping at half width.

5

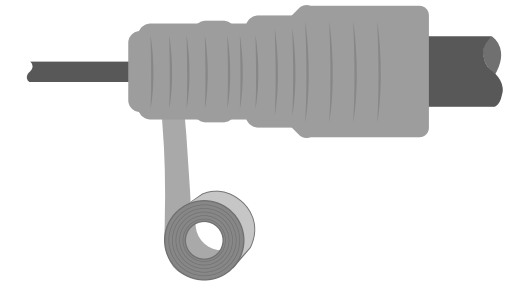

Wrap three layers of 19 mm adhesive plastic tape overlapping at half width.

6

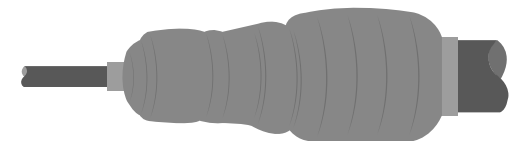

Extend the wrapping of each tape beyond 50 mm previous tape.