

RAC+ pat.

Cable Clamps for Radiating Cables


 NO TOOLS CABLE FASTENING

✓ IMPROVED CABLE RETENTION STRENGTH (+50%)

✓ QUICKER AND EASIER INSTALLATION


RAC with DRA spacer.

1

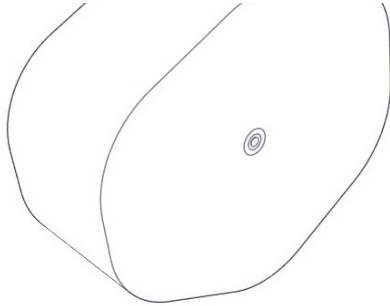


Drill a Ø 10mm hole, minimum 80mm deep.
Clean hole. Insert plug in hole.

2

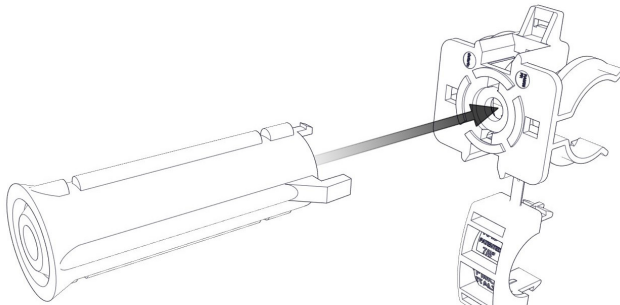


Fix **DRA** spacer on **RAC** cable clamp.

3

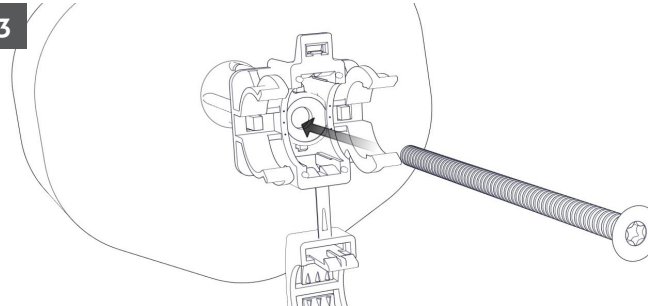


Insert **SPS** screw in **RAC** cable clamp.

4

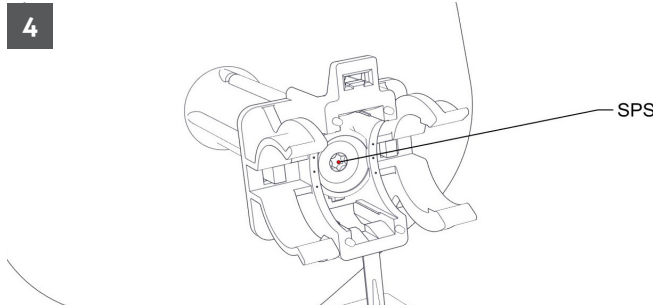


Tighten SPS screw in plug (4 to 5 Nm).

!

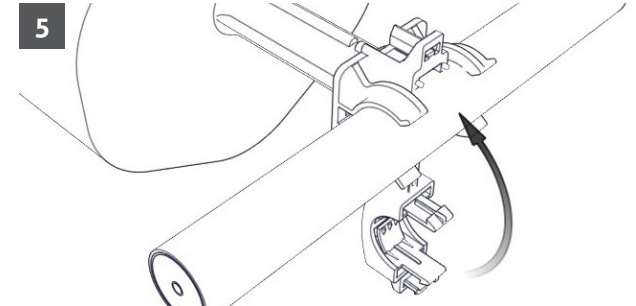

Insert cable in RAC cable clamp.
Close clamp around cable.

©

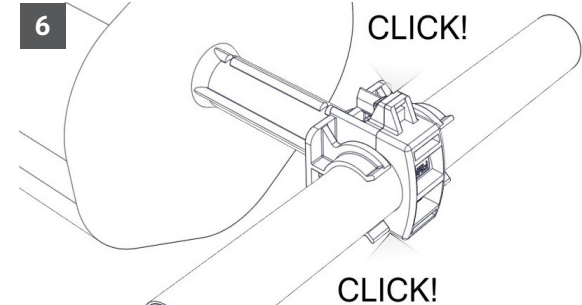

Assure complete closure on both sides along with security hook insertion.


WARNINGS

Installation of products must be performed by qualified, trained and experienced personnel.

Mounting instructions and warnings must be read prior to installation. Failure to observe warnings may result in injury or death to you or others.

Warnings alert you to possible dangers about improper use of product.

CORRECT INSTALLATION DISTANCE

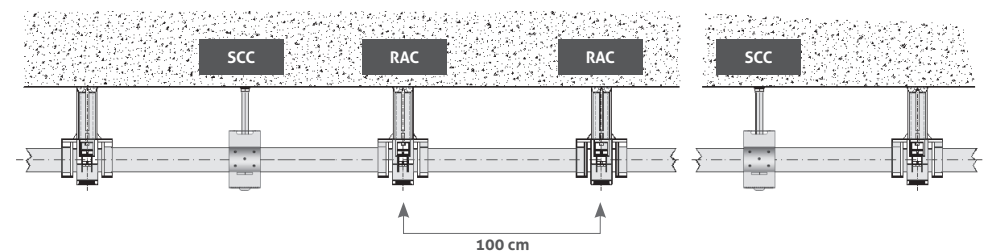

Notice: Manufacturer declines any liability or responsibility for the results of improper or unsafe installation, inspection, maintenance, or removal practices.

IST. 021 - 11/13 - A4 - REV. 2



| All rights reserved.
 | Passing on and copying of this document,
 | use and communication of its contents not
 | permitted without Fi.Mo.Tec. S.p.A. prior consent.



