




Polymer Angle Adapter

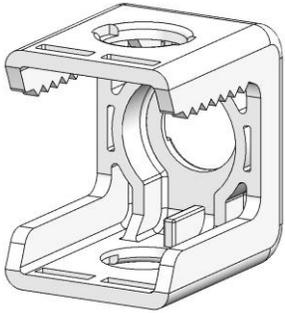


Adapter

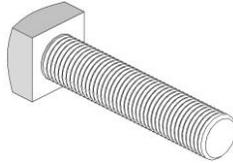

Plastic Screw

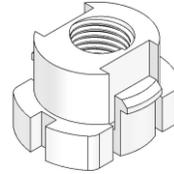


Inclined Insert

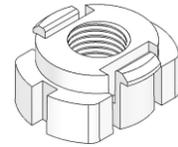


Straight Insert

Part #	Adapter	Plastic Screw	Inclined Insert	Straight Insert
6125233019	10	-	-	-
6125232019	10	10	10	-
6125233038	10	10	10	10


For 6125233019:

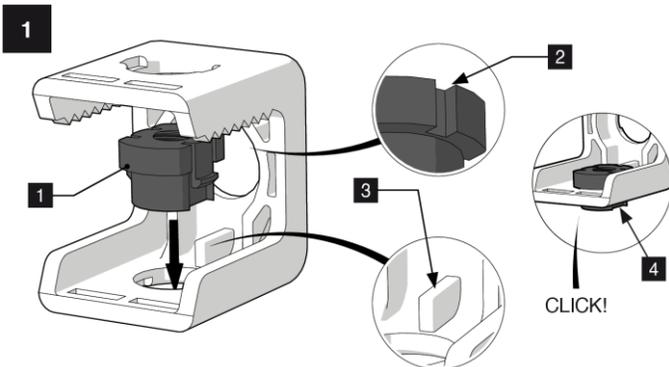


Plug the inclined insert (1) into the 3/4" hole on the adapter that is on the opposite side of the serrated teeth by aligning the notch (2) with the anti-rotation rib (3) till lock position (4)

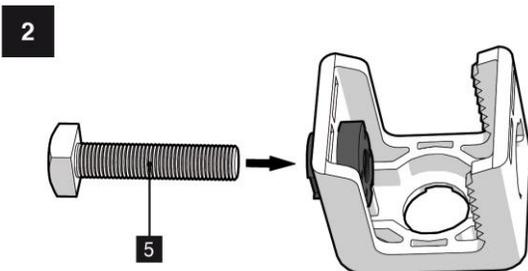

Fasten the plastic screw (5) into the inclined insert

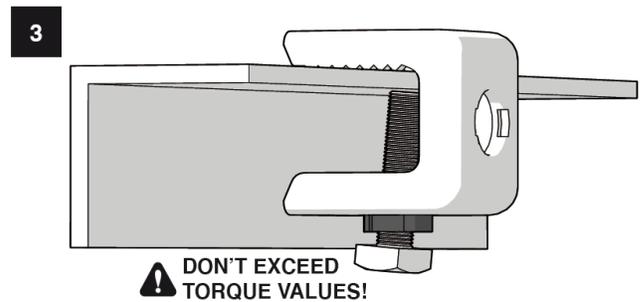


Place the adapter on an angled member and tighten the screw **0.8 – 1 Nm Max**

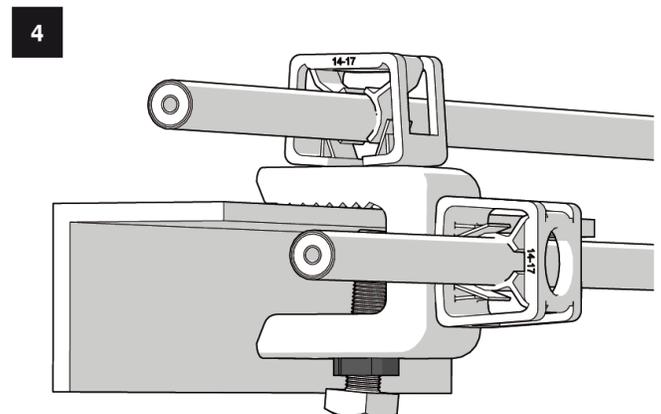


Insert snap-in hangers into 3/4" holes




For 6125233038:

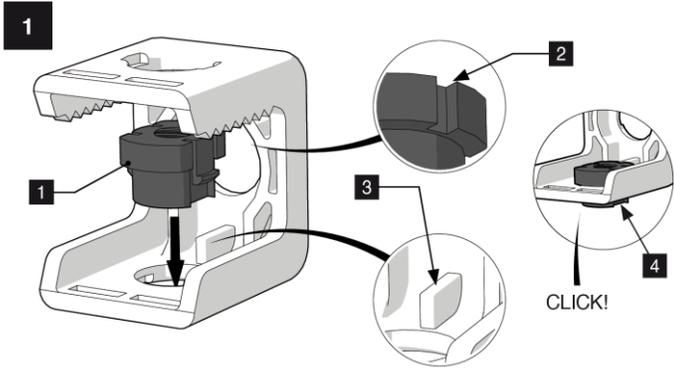


Plug the inclined insert (1) into the 3/4" hole on the adapter that is on the opposite side of the serrated teeth by aligning the notch (2) with the anti-rotation rib (3) till lock position (4)

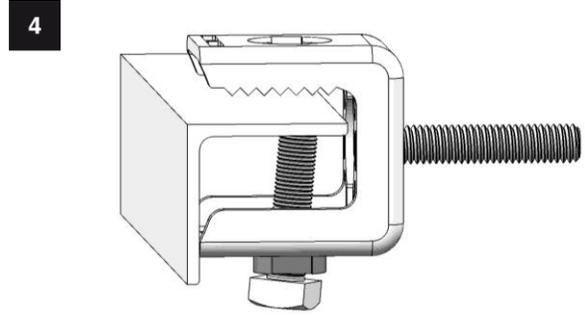


Place the adapter on an angled member and tighten the screw **0.8 – 1 Nm Max**

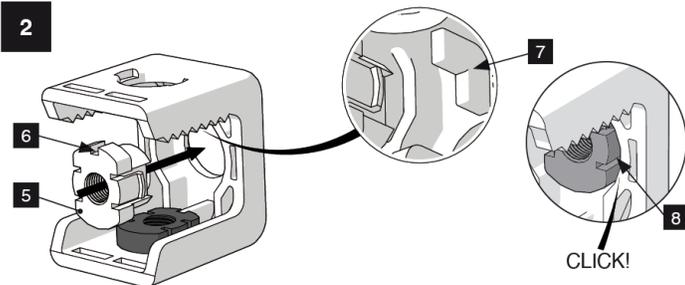

Plug the straight insert (5) into either of the remaining two 3/4" holes on the adapter by aligning the notch (6) with the anti-rotation rib (7) till lock position (8)

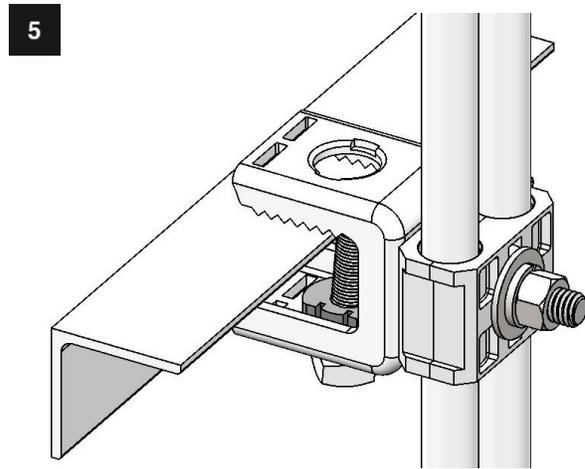


Install Cable Blocks or any other compatible cable hangers

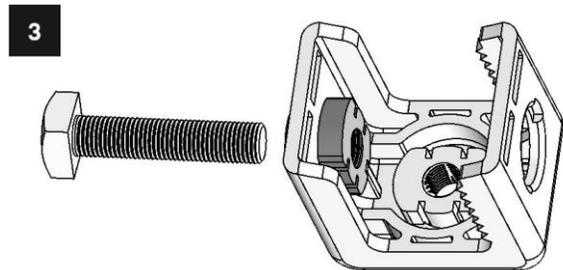

Fasten the plastic screw (5) into the inclined insert

For 6125233019:

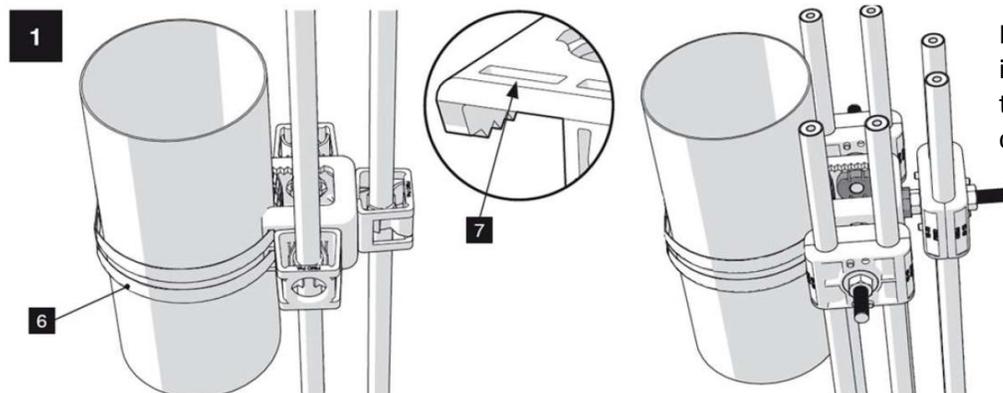

Insert acetal strap (6) (sold separately) in each slot (7) then fasten the adapter to the pole with the tie wraps / hose clamps.