



PPS 62

Wall entry

- 1** Drill the main holes by means of commercial core bits $\varnothing 62$ mm (fig. 1).




- 2** Drill holes and place the wall entry in position. If necessary put silicon between wall-entry and wall.

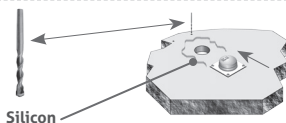



- 3** Fix wall-entry to the shelter using proper bolts and counter frame.



- 4** Remove sealing film of wall entry with knife and insert cables.



- 5** Apply LUS silicon grease to internal and external surfaces of cushions and cables. Insert cushions in hole.



- 6** Put FAS steel hose clamp on rubber collar of wall entry. Tighten screw until closure is obtained.

