


SIC


Snap-In Clamp For Coaxial Cables (Pat.)

1




Insert Sic Snap-in clamp
on the cable

2

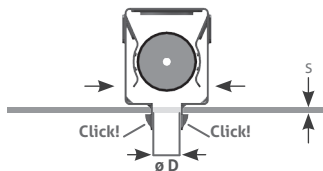

Press Sic Snap-in clamp into hole "D"
Verify the correct hooking of the tabs.

3

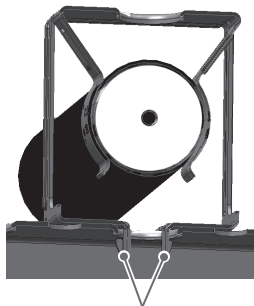

Assure the correct
hooking of the tabs.

Sic snap-in clamps can be applied on special sections with 3/4" pre punched hole.
Thickness of pre-punched hole: $S=3-4.3\text{mm}$.
No tools required.

ST 028-4/11-A6-REV.1



All rights reserved.

Passing on and copying of this document,
use and communication of its contents not
permitted without Fi.Mo.Tec. S.p.A. prior consent.

SIC





Snap-In Clamp For Coaxial Cables (Pat.)

Snap-In clamp wings are provided of anti-rotation pins. Avoid SIC rotation around the cable.
Do not strip power cables to avoid electrical risk or damaging cables.
Do not use clamp for different purposes.

MANUFACTURER DISCLAIMS ANY LIABILITY AND RESPONSABILITY FOR IMPROPER USE.
INSTALL USING PROPER SECURITY DEVICES.



POSSIBLE COMBINATIONS

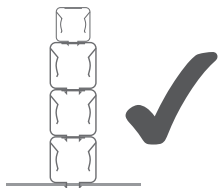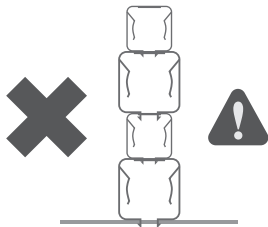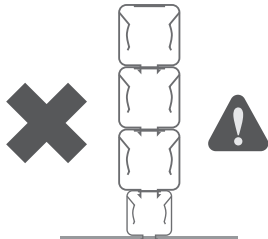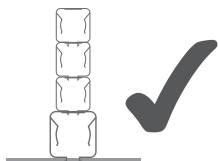

ST 028 - 4/11 - Ag - REV.1



All rights reserved.

Passing on and copying of this document,
use and communication of its contents not
permitted without Fi.Mo.Tec. S.p.A. prior consent.