

RAX+COL* KIT pat.

Cable Clamps for Radiating Cables


✓ ALL-NEW ULTRA-EFFICIENT CLAMPING

✓ 100% NO-TOOLS FASTENING


✓ QUICKER AND EASIER INSTALLATION

RAX+COL* KIT pat.

1

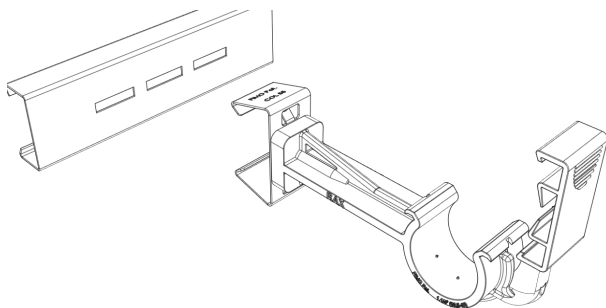

2

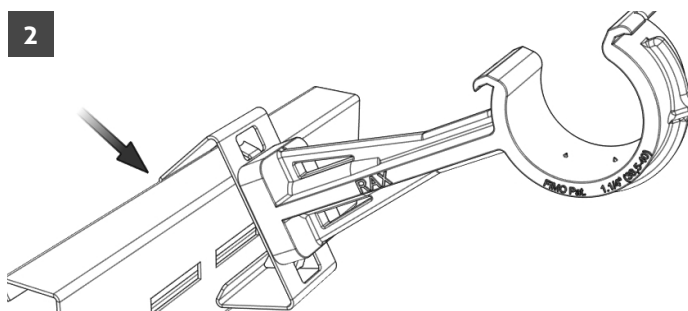

Hook upper clip-on corner on section,
with cable clamp's opening facing upwards.

*) Use COL only on specified ladders, see below:


COL 55
For LOE-55 ladder by OGLAEND SYSTEM.




COL 75
For LOE-75 ladder by OGLAEND SYSTEM.



COL 100
For LOE-100 ladder by OGLAEND SYSTEM.




3

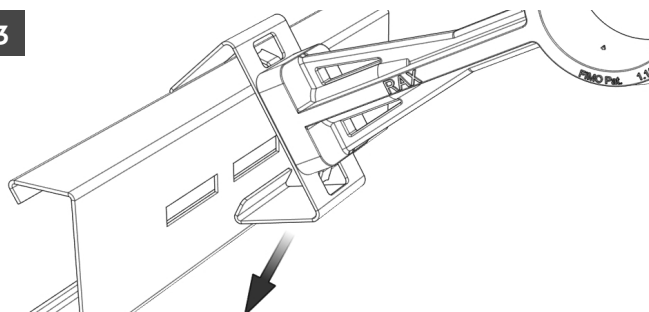


Pull RAX clamp downwards to embrace section.

4

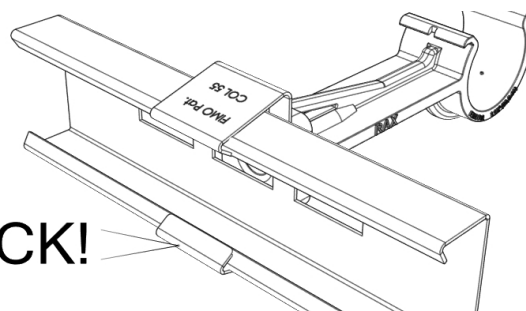**CLICK!**


Apply pressure onto lower clip hook until loud **CLICK!** is heard.

5

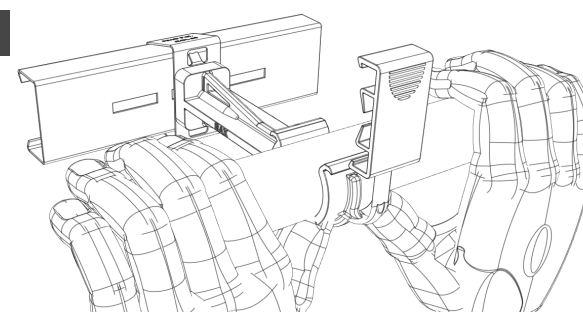


Insert cable into RAX clamp contrasting from below.

6

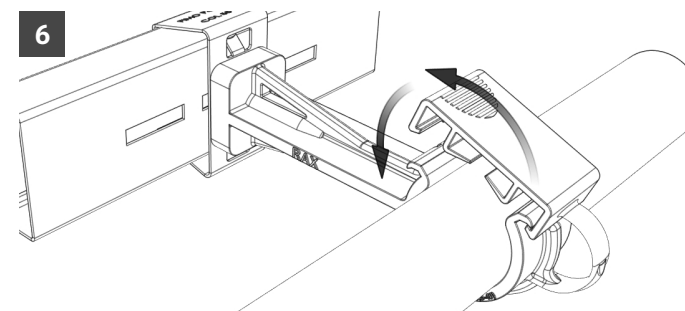

Place outer bracket end.

7

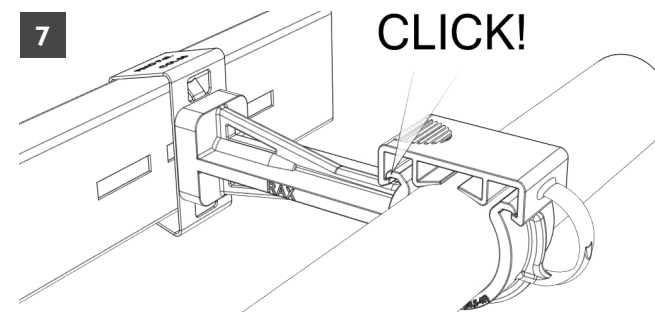**CLICK!**

Close bracket over cable with a **CLICK!** at inner end.

⚠ WARNINGS

Installation of products must be performed by qualified,
trained and experienced personnel.

Installation personnel must be correctly and safely equipped.

Mounting instructions and warnings must be read prior to installation.

Warnings alert you to possible dangers about improper use of product.

Failure to observe warnings may result in injury or death to you or others.



Notice: Manufacturer declines any liability or responsibility for the results of
improper or unsafe installation, inspection, maintenance, or removal practices.

IST. 035 - 01/14 - A4 - REV. 0



All rights reserved.
Passing on and copying of this document,
use and communication of its contents not
permitted without Fi.Mo.Tec. S.p.A. prior consent.



Building Sustainable Innovation