



PPS 40

Wall entry

- 1** Drill the main holes by means of commercial core bits $\varnothing 40$ mm (fig. 1).




- 2** Drill holes and place the wall entry in position. If necessary put silicon between wall-entry and wall.

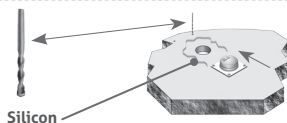



- 3** Fix wall-entry to the shelter using proper bolts and counter frame.




- 4** Remove sealing film of wall entry with knife and insert cables.



- 5** Apply LUS silicon grease to internal and external surfaces of cushions and cables. Insert cushions in hole.



- 6** Put FAS steel hose clamp on rubber collar of wall entry. Tighten screw until closure is obtained.



ST 031 - 5/11 - Ag - REV. 0



All rights reserved.

Passing on and copying of this document, use and communication of its contents not permitted without Fi.Mo.Tec. S.p.A. prior consent.

