
## **PMR**

### **Wall Entries**

Copyright © Fi.Mo.Tec. S.p.A. www.fimoworld.com

IST. 006 - REV. 3 - 04/21

#### **INSTALLATION INSTRUCTIONS**

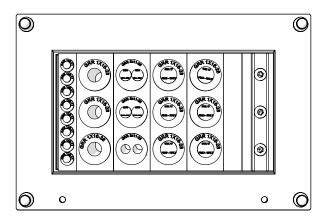





Installation of products must be performed by qualified, trained and experienced personnel. Installation personnel must be correctly and safely equipped. Mounting instructions and warnings must be read prior to installation. Warnings alert you to possible dangers about improper use of product. Failure to observe warnings may result in injury or death to you or others.



Fi.Mo.Tec. S.p.A. is certificated ISO 9001 and RoHS DIRECTIVES compliant.




All rights reserved.

Passing on and copying of this document, use and communication of its contents not permitted without Fi.Mo. Tec. S.p.A. prior consent.




Cut a suitable rectangular opening as per the dimensions shown in the table. Position **PMR** Wall Entry and fix it to the wall by screws and **MZK** plugs (included in the box).

Should the wall surface be rough, put some Silicon between wall and EPDM gasket.

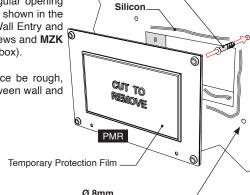


MZK - Pluas

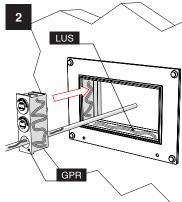


Remove the temporary protection film. Carefully lubricate the inside wall entry surfaces by LUS lubricant. Lubricate inside and outside the GPR cushions and insert them onto the cables.

Let GPR cushions slide on cables, and introduce them in the PMR Wall Entry. Complete the PMR filling by the needed further GRR cushions. Reduction cushions as GRR 1x. GRR 2x, etc. are available for small cable diameters.


Lubricate and insert the expander GPE for tight sealing of PMR Wall

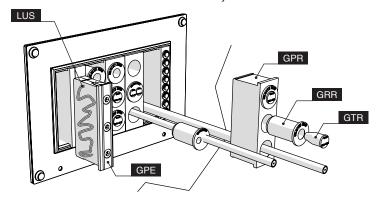

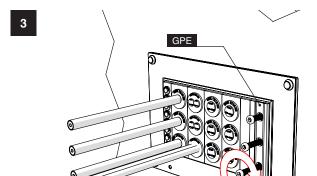

Tighten progressively and alternatively the 3 screws of the expander GPE. Max tightening torque = 4 Nm.

Max 4 Nm

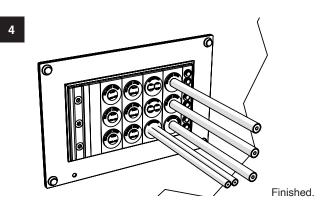


CODE	ARTICLE	FRAME Lx220	WALL OPENING Dimensions Referred to Frame's external size
61 1511 1400	PMR 140/01	240x220	160x140
61 1511 2300	PMR 230/02	330x220	250x140
61 1511 2800	PMR 280/03	380x220	300x140
61 1511 3300	PMR 330/04	430x220	350x140







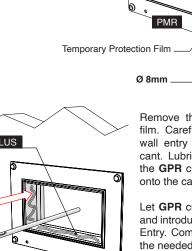


# **PMR**

### **Wall Entries**

Copyright © Fi.Mo.Tec. S.p.A. www.fimoworld.com

IST. 006 - REV. 3 - 04/21

### **INSTALLATION INSTRUCTIONS**

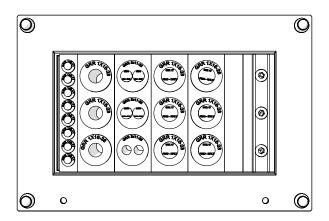





Installation of products must be performed by qualified, trained and experienced personnel. Installation personnel must be correctly and safely equipped. Mounting instructions and warnings must be read prior to installation. Warnings alert you to possible dangers about improper use of product. Failure to observe warnings may result in injury or death to you or others.





Fi.Mo.Tec. S.p.A. is certificated ISO 9001 and RoHS DIRECTIVES compliant.





All rights reserved.


Passing on and copying of this document, use and communication of its contents not permitted without Fi.Mo. Tec. S.p.A. prior consent.

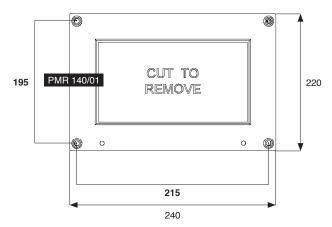

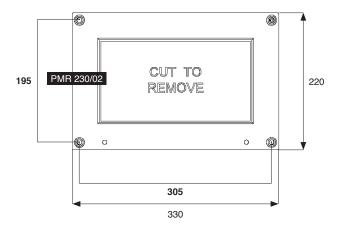

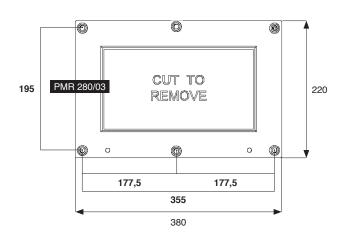

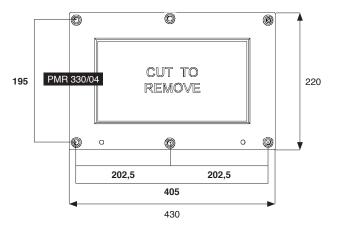



CODE	ARTICLE	WALL OPENING Dimensions Referred to Frame's external size
61 1511 1400	PMR 140/01	160x140
61 1511 2300	PMR 230/02	250x140
61 1511 2800	PMR 280/03	300x140
61 1511 3300	PMR 330/04	350x140