WPE

Waterproofing Enclosure

Copyright © Fi.Mo.Tec. S.p.A.
www.fimoworld.com

IST. 001 - REV. 0 - 11/15

INSTALLATION INSTRUCTIONS

FIMO
Building Sustainable Innovation

WARNINGS!

Installation of products must be performed by qualified, trained and experienced personnel. Installation personnel must be correctly and safely equipped. Mounting instructions and warnings must be read prior to installation. Warnings alert you to possible dangers about improper use of product. Failure to observe warnings may result in injury or death to you or others.

Fi.Mo.Tec. S.p.A. is certificated **ISO 9001** and **RoHS DIRECTIVES** compliant.

All rights reserved.
Passing on and copying of this document, use and communication of its contents not permitted without Fi.Mo. Tec. S.p.A. prior consent.

1

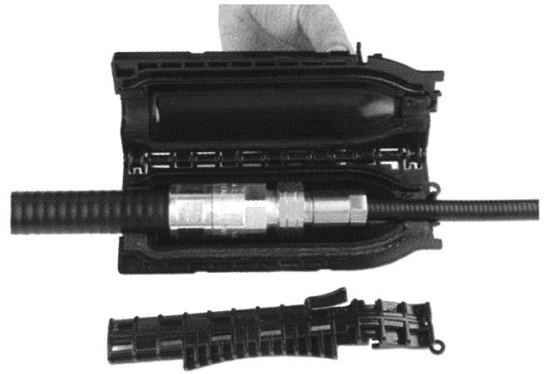

Open the WPE and place the connector inside.

2

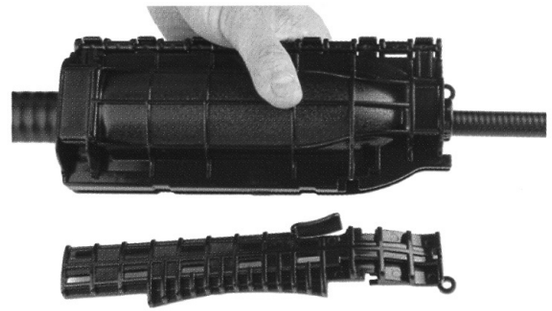

Close the WPE around cables and connectors.

3

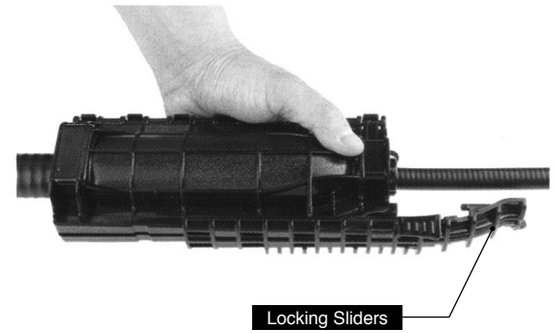

Slide the Locking Slider towards closing position.

4

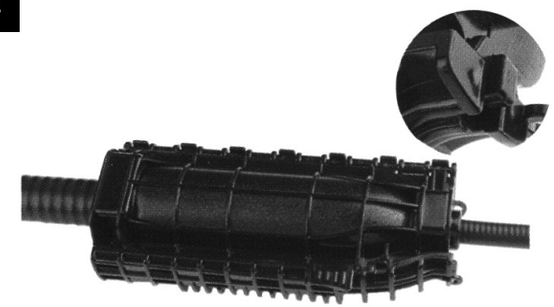

Verify that the hole of the pin covers the eminent point of closure.